GB

SCOTT®

RX20W

AM/FM WOODEN RADIO

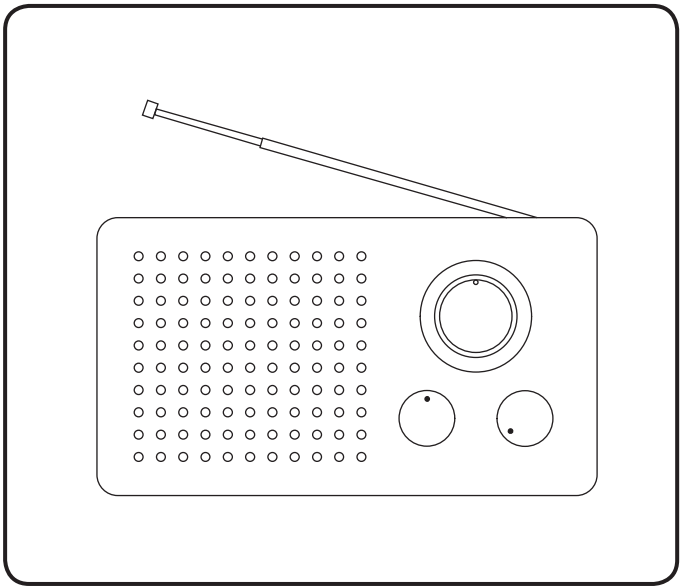

INSTRUCTION MANUAL

CE

WARNINGS

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION
To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit . Refer all servicing to qualified personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING
To reduce the risk of fire or electric shock , do not expose this appliance to rain or moisture.

ENSURE A MINIMUM DISTANCE OF 5 CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.

ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC..

DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.

TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.

USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).

WARNING INSTRUCTIONS CONCERNING THE RISK OF HEARING LOSS CAUSED BY USING EAR- AND HEADPHONES WITH CONTINOUSLY EXCESSIVE SOUND PRESSURE.

DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.

DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.

The mains plug shall remain readily operable.

In case of misfunction due to electrostatic discharge the apparatus has to be reset by disconnecting it from mains supply.

Where to place the item :
Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.Please
recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

THE MARKING PLATE IS LOCATED AT THE BACK OF ENCLOSURE OF THE APPARATUS.

LOCATION OF CONTROL

Front

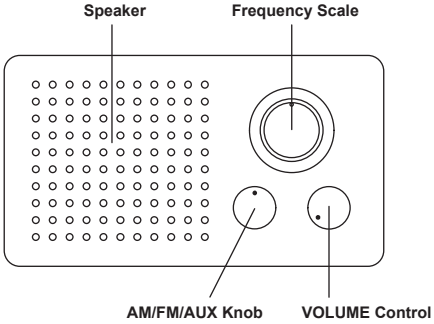

Rear

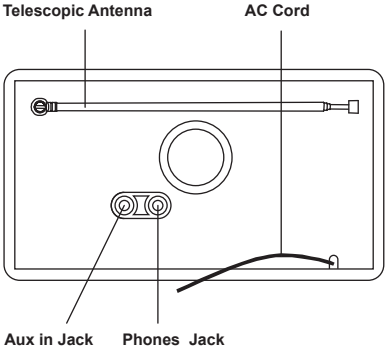

BEFORE USE

The appliance is designed for mains operation with an alternating voltage of AC 230V~50Hz. Never attempt to operate the appliance with a deviating power supply. Otherwise the appliance will be damaged and there is a risk of safety.

MAINS (AC) OPERATION

Connect the supplied cable to a fully installed 230V ~ 50Hz protective contact socket and to the cable socket on the back of the device. The appliance is now ready for use.

CAUTION

To prevent electric shock disconnect from the mains before removing cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

OPERATION

- To turn the unit on, rotate the VOLUME ON/OFF control clockwise until a click sound is heard.
- To turn on the radio, set the AM/FM/AUX Knob to either AM or FM.
- For FM reception, pull out the telescopic antenna as far as possible and direct it for possible reception.
- For AM reception, transmitters an internal ferrite antenna is built into the appliance. Position the appliance for a good reception.
- Adjust the station selector TUNING to the intended station.
- Adjust the Volume Control to the intended sound.
- To turn off the radio, set the VOLUME ON/OFF CONTROL to OFF.

CARE

Protect the appliance from strong temperature variations and excess dust. If necessary, wipe it off with a dry cloth.

AUX. IN

An external (auxiliary) audio source (i.e., personal CD player or MP3 player) can be connected to this unit and heard through the speakers.

1) Plug one end of aux. in cable (included) into the AUX. IN socket on the unit.
2) Plug the other end of aux. in cable into the Headphone or Line Out socket of the external source.

Operate CD or MP3 player as usual. Music will be heard through the unit's speakers.



PHONE JACK

FOR PRIVATE LISTENING
Plug in headphone (ø3.5 mm stereo mini-plug) into the PHONE jack.
When headphone is plugged in, the speaker are automatically disconnected.

SPECIFICATION

Power Supply
AC: 230V ~ 50Hz

Radio Frequency Coverage
AM: 540 - 1600 kHz
FM: 87.5 - 108 MHz

General
Speaker: 8 ohm